

Stop on hill.  
Guard do NOT apply handbrakes

## Statutory Air Brake Test

Driver dump air

Guard isolate all units  
(close air valves)

Guard works  
towards driver

Driver pump air  
Guard read gauge)

Always start testing at  
Locomotive end of train

Roll started  
Before 50psi?

yes

**Report Failure**

**Take offending  
item  
Out of service**

Any more units?

no

Driver dump air

Guard open next valve

**Run Train**